



Israel Solidat Applied Technologies Ltd

Entering MonoScan Distributor Mode

This document assumes familiarity with the general functionality of the MonoScan keypad.

Be extra careful whenever using the Distributor Mode to avoid product malfunction.

1. Enter Distributor Mode (entering 00.18 in PR02 as follows)

1.1 Turn the MonoScan On.

1.2 Press ENT and ESC simultaneously to enter the Programming mode PR.01.

1.3 Press NEXT to obtain PR.02.

1.4 Press ENT once or twice to obtain "H nn" display.

1.5 Press ENT again to obtain a four digit display (e.g. 08.50) with the leftmost digit blinking.

1.6 Change the display to 00.18 as follows:

1.6.1 Press NEXT or BACK to modify the leftmost digit to zero. Then press ENT.

1.6.2 Press NEXT or BACK to modify the second leftmost digit to zero. Then press ENT.

1.6.3 Press NEXT or BACK to modify the third leftmost digit to one. Then press ENT.

1.6.4 Press NEXT or BACK to modify the rightmost digit to eight.

1.7 Press ENT. You should see a flashing YES and then return to PR.02.

1.8 Press NEXT several times to obtain PR.20 which **is only** available at the **Distributor Mode** .

2. Back to User Mode

Enter 0018 into PR02 again OR press PR01 OR turn off the power and then on again.

We appreciate your feedback whether our instructions are clear and the modification worked for you,