

MonoScan®

Quick Reference Guide


MonoScan must be installed, connected and operated according to the instructions in the User's Manual.

If installed incorrectly or used for applications for which it is not intended application-related dangers may arise.

Only qualified personnel are authorized to install and operate MonoScan.

Do not open the MonoScan unit.
If the unit is opened the warranty is null and void.

Modifications and repairs to MonoScan are permissible only when the manufacturer expressly approves them.

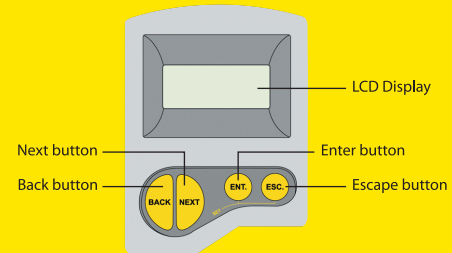

ENT

Accessing the functions menu (when pressed simultaneously with ESC).

Selecting functions.

Progressing to the next step of a function.

Moving from left to right between displayed digits. Saving changes to data.

ESC

Accessing the functions menu (when pressed simultaneously with ENT).

Exiting the functions menu to restore the distance reading.

BACK NEXT

Moving from right to left between displayed digits.

Exiting a function without saving changes.

Clearing error messages.

Scrolling through the functions menu.

Scrolling through available data values in functions.

NEXT button only: Recording interfering signals.




SOLIDAT

Israel Solidat Applied Technologies Ltd

www.solidat.net
manager@solidat.net

MODEL 0 S,L,O S,L,O S,L,O S,L,O S,L,O L,O S,L,O S,L,O S,L,O

PR.

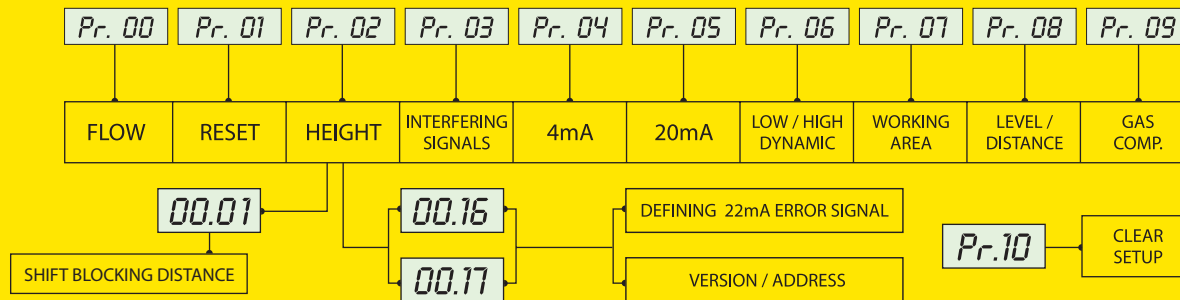

PRECAUTIONS

Ensure that MonoScan is mounted in an area that meets the stated technical specifications.

Ensure that high-voltage sources or cables are at least 1 m away from the sensor and its cable.

Use round cables with a minimum diameter of 6 - 7 mm to ensure that the unit remains sealed, IP 65 / IP 67.

Ensure that cables are routed correctly and tightened along walls / pipes.

Ensure you are connecting the MonoScan to a proper Power Supply.

When installing MonoScan, ensure that it is:

- Mounted above the dead-zone area
- Positioned at least 0.5 m (1.64 ft) away from the tank walls
- Perpendicular to the surface of the target
- Placed as far as possible from noisy areas, such as a filling inlet

Revision: 1.1

Software Version: 4.09

ERRORS

8.8.8.8

Appears for several seconds after restarting the unit.

EC11

Noise in area.

ES55

Faulty power supply.

5544

Sensor disconnected.

8818

Any combination of three 8s and one 1: indicates an electrical shortage.

Catalog Number: 680002D

Date: October, 2004